


## Step1:

1. Connect M8128B2 to PC via RS232.


2. Power on M8128B2.

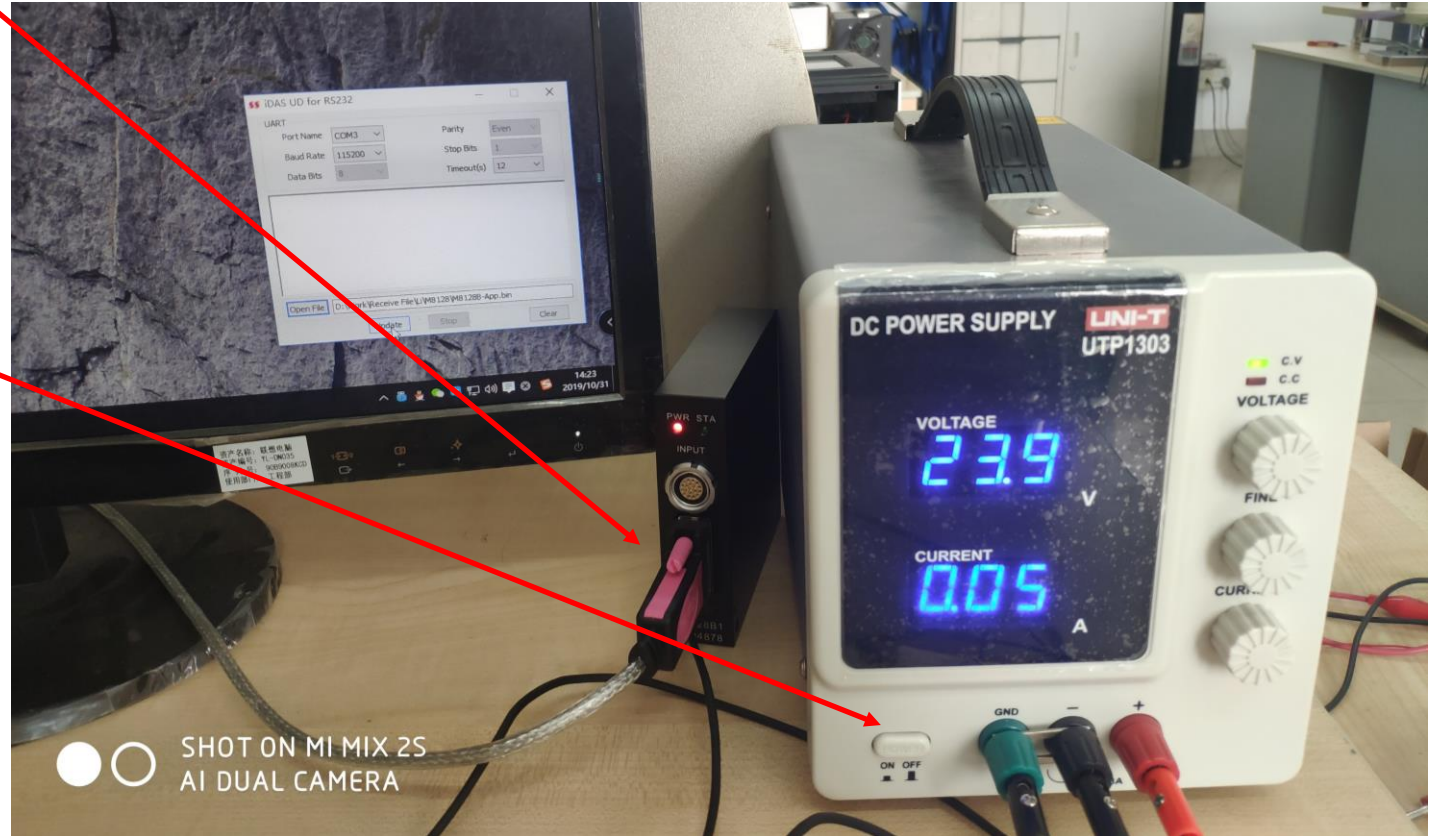

**Step2:**

1. Set RS232 communication



2. Open "M8128B-App.bin"

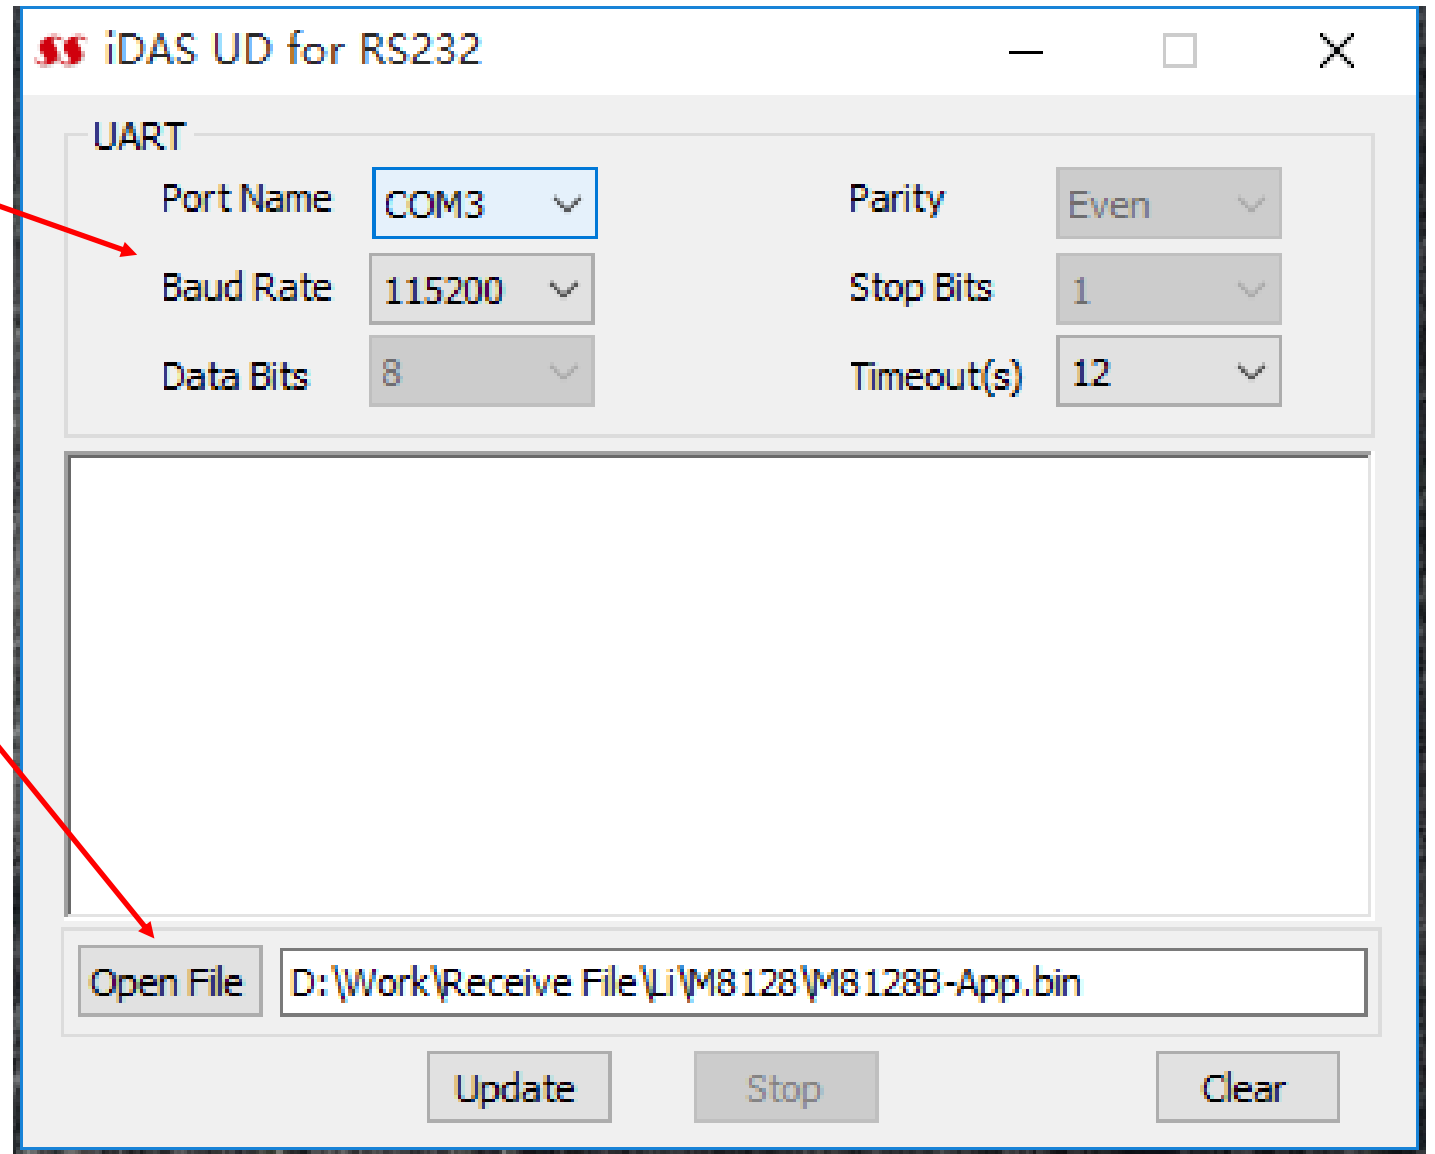

### Step3:

1. Click "Update"

2. If it's working, you can see the processing bar.

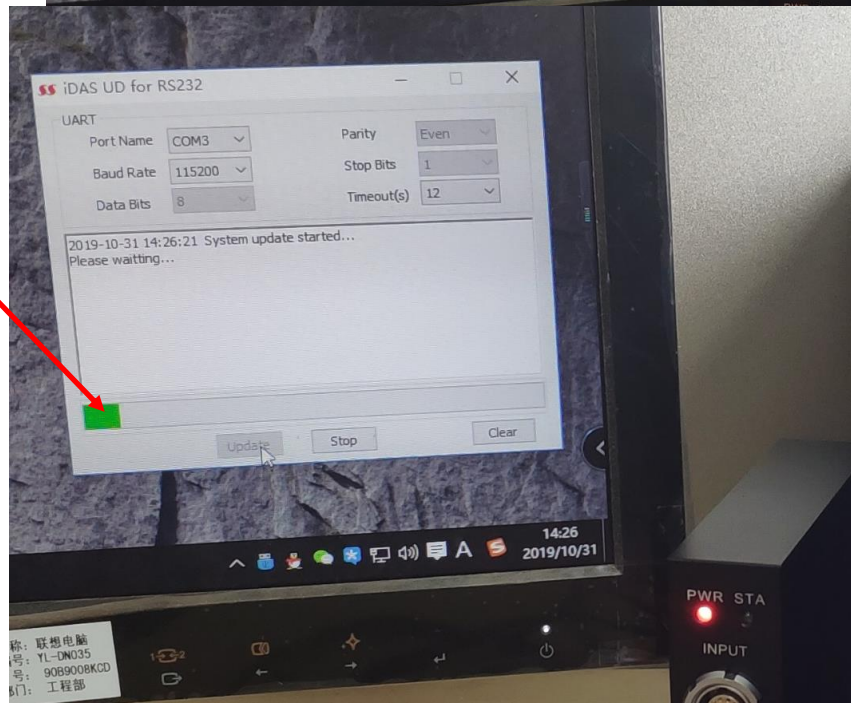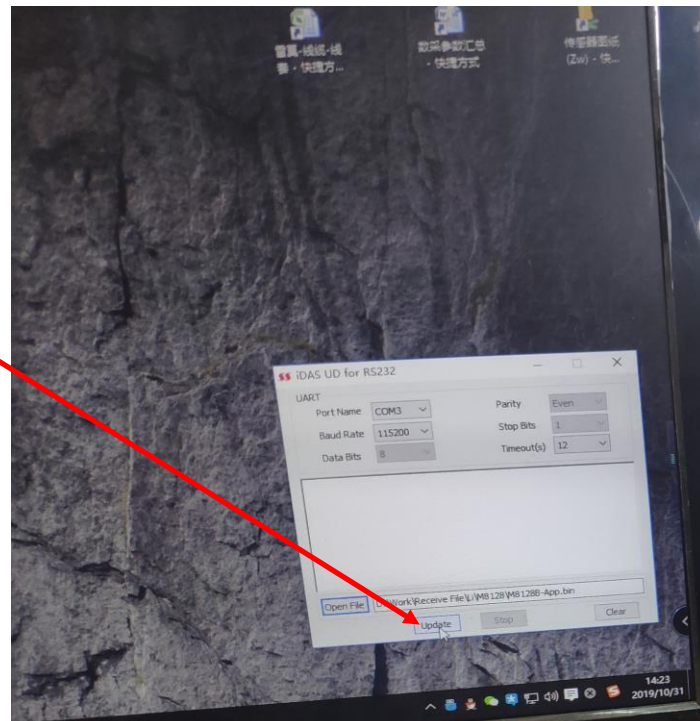

#### Step4:

1. You can see below information if it is done.

